
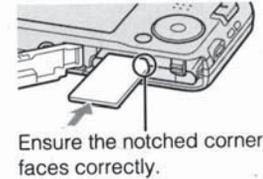
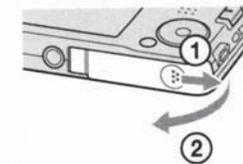
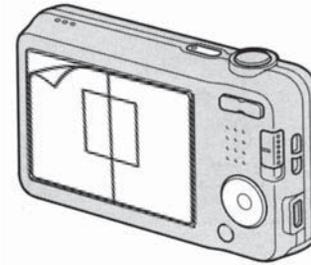
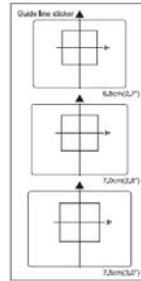


Sony DSC-W710 preparation

1. The camera battery must be charged before using the camera. Use the supplied battery charger and allow at least 2 hours to fully charge.

2. Apply the 6.8 mm size guideline sticker with the arrow pointing up as shown below. The guideline will help to insure proper head and facial alignment.

3. Slide the bottom cover to open and Insert the provided Flash Air SD labeled **C** into the card slot until it clicks into place. Slide the cover back to close.


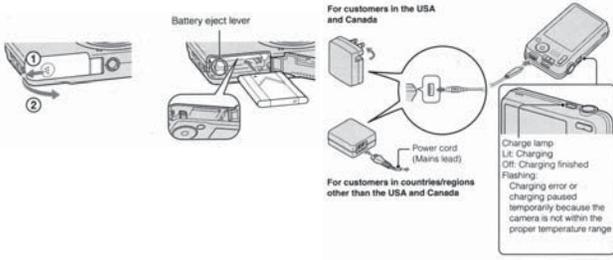


System setup


1. Insert the provided Flash Air SD card labeled P into the card slot on the printer until it clicks into place.*

2. Power on the camera.

Select a desired language.
 Select a desired location by following the on screen instructions, and then press the ● on the control button.
 Set [Date & Time format], [Summer Time], and [Date & Time] then select [OK] → [OK].
 Follow the instructions on the screen.

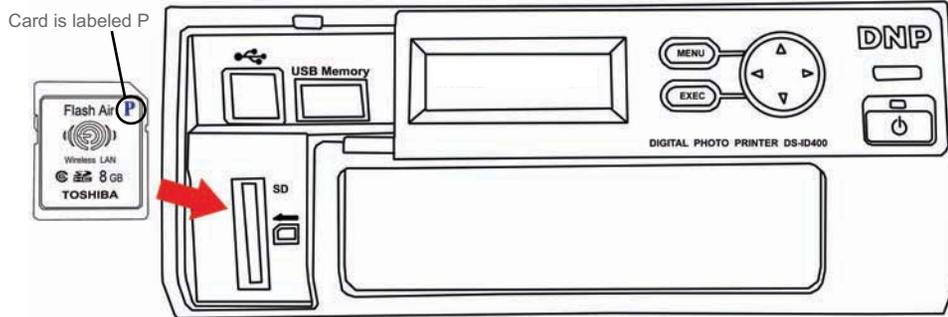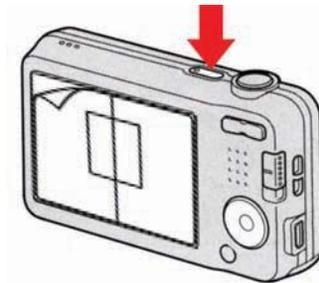


3. Power on the printer.

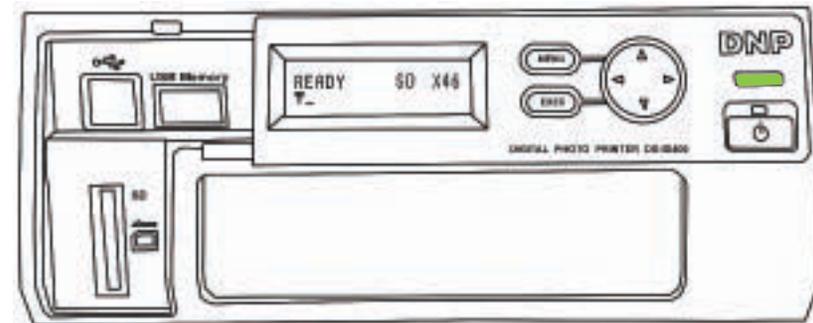

It takes about 25 seconds for the green light on the printer to blink, showing you have a good connection/signal strength.

*The ID400DC2 is shipped with the wireless LAN SD Card for the printer already inserted in to the SD card slot.

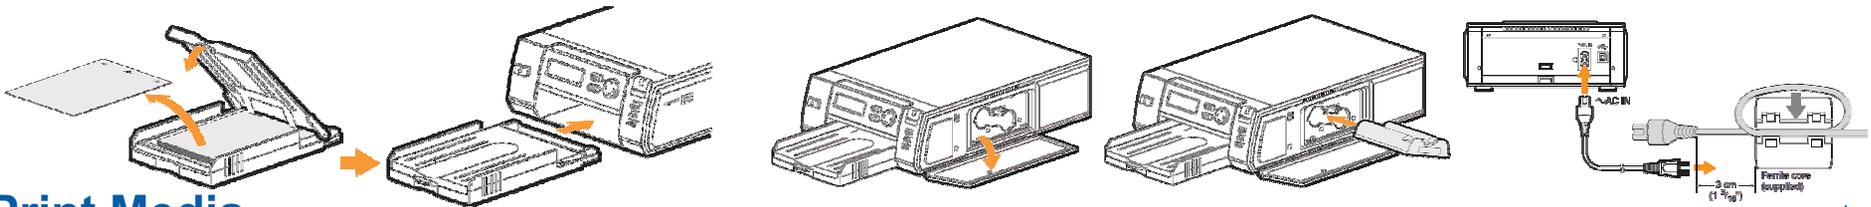

Print Media

1. Load the paper with the arrow pointing toward the printer (DNP ID Photo watermark side down). Remove the protective sheet and set it aside for future use as a cleaning sheet. Insert the paper tray until it clicks into place.
2. Press the PUSH OPEN area at the top of the cartridge compartment to open it. Insert the print cartridge until it clicks into place.
3. Attach the supplied ferrite core to the end of the cord as shown. Connect the power cord to the printer and plug the other end to an outlet. Press the power button on the front panel.

Printer Settings

Select the language to be displayed:

1. Press the MENU button.
2. Press the DOWN arrow on the control button to display [SYSTEM] on the LCD display.
3. Press the RIGHT arrow. [SYSTEM SETTINGS] appears.
4. Press the RIGHT arrow. The currently selected language appears.
5. Press UP or DOWN to select the language you want to use, and press the EXEC button. The LCD display appears in the selected language.

Select the layout you want to print from the ID photo layout templates stored on the unit.

1. Press the MENU button.
2. Press the DOWN arrow on the control button to display [ID PHOTO LAYOUT] on the LCD display.
3. Press the RIGHT arrow. The layout names appear.
4. Press UP and DOWN to select the layout you want to print, and press the EXEC button.
5. The selected layout name appears under [READY]. If the antenna icon appears instead, press UP or DOWN to display the layout name.

The ID400DC2 model is shipped with the wireless LAN SD card for the printer already inserted in the SD card slot.

USA-passport
PUSH [EXEC]




Capture & Print

1. With the camera and printer powered up, the printer will display the following:

READY SD X46
Pill

2. When shooting, follow these guidelines:

- For best results with the Camera auto-exposure, use a light colored non-reflective background screen.
- Keep the face within the frame of the guideline.
- The top of the head should align with the top of the frame and the bottom of the chin should align with the bottom of the frame.

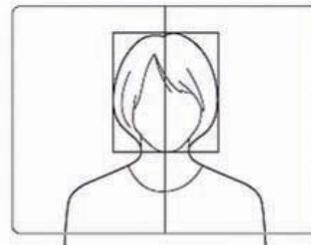

4. Press the Play button to review the image.



5. Press the menu button and scroll down to DPOF, pressing the center button to select.



RECEIVING
Pill [>>]

The printer will show it is receiving the image.

6. Press the center button to print. It will take about 20 sec to receive and print.

PRINTING [1/1]